


INSTRUCTION MANUAL

XOTIC[®]
PERFORMANCE

CHEVROLET LS CAM & RETAINER PLATE BOLT KIT

PART NUMBER CB100

1. Before installing any components, please check for any product damage, and report to us accordingly.
2. Use the provided assembly lubricant to lubricate under the head of each bolt. This will reduce friction and allow for accurate torque readings.
3. Finally, place the bolt provided onto the retainer plate using the torque specs below and tightening the bolts by hand. Proceed to torque the bolts to 25 ft-lbs using a cross pattern for even distribution of pressure.

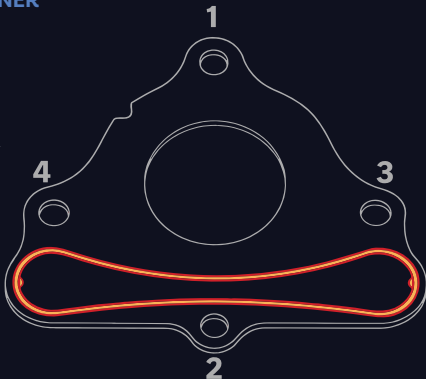

SCAN ME

WORKING ON AN EXCITING NEW PROJECT?

Show off your craft on Instagram and tag us
in your picture for a chance to be featured!

#XOTICPERFORMANCE



SCAN ME

NEED HELP?

For technical support, please email:
tech@xotic-performance.com